



深圳开源通信有限公司

OpenVox A2410P/AE2410P 用户手册



A2410P

AE2410P

日期:2010/9/27

版本:1.1





深圳开源通信有限公司

OpenVox-Best Cost Effective Asterisk Cards

广东省深圳市福田区沙嘴路金地工业区 127 栋 3 楼

电话:0755-82535461

0755-82545095

0755-82535362

传真:0755-82535174

业务邮箱:sales@openvox.cn

技术支持邮箱: <u>support@openvox.cn</u>

上班时间:周一至周五早上9:00-至下午6:00,节假日除外。(GMT+8北京时间)

Thank You for Choosing OpenVox Products!

2



3

目录

第一章	既述4	ł
第二章	更件介绍 E	5
第三章	安装与配置	7
第四章	Elastix 页面配置	3
第五章	支术支持	}
第六章	参考	3

4



第一章 概述

1. A2410P/AE2410P 是什么

A2410P 是一个模块化的模拟电话产品,AE2410P 在 A2410P 的基础上增加了一个 Octasic 硬件回声消除模块。它是为建立 IP PBX 而设计的。A2410P/AE2410P 须使用 FX O400 或 FXS400 来组成一个可行的系统。AE2410P 具有回声消除模块,这个模块也是必 须与 FXO400 或 FXS400 一起使用的。

2. 什么是 Asterisk

Asterisk 是一个开放源代码的软件 VoIP PBX 系统,它是一个运行在 Linux 环境下的纯软件实施方案。Asterisk 是一种功能非常齐全的应用程序,提供了许多电信功能,能够把你的 x86 机器变成你自己的交换机,还能够当作一台企业级的商用交换机。Asterisk 让人激动的事情是它在小企业预算可承受的范围内提供了商业交换机的功能和可伸缩性。



Asterisk 的通道维护着VoIP和PSTN上的各种形式的链接,包含的VoIP协议有 SIP、IAX、MGCP 和H.323。



5





第二章 硬件介绍

如上图所示: A2410P/AE2410P 有六个模块,每个模块(FXS400/FXO400)分别对应 一个 RJ45 接口。一个 RJ45 接口有八条线路,每两条线为一路电话,只要接上分线盒就可 以分出四路电话。

下面是 A2410P/AE2410P 的 RJ45 口的线路组合方式:







这个黑色的盒子就是分线器, 负责把 RJ45 口出来的线路分 成四路 RJ11 电话,线路的顺 序和通道的顺序一致。



第三章 安装与配置

操作环境:

- Elastix 1.6
- Dahdi-linux-complete-2.2.0.2+2.2.0
- Asterisk:1.4.26.1
- OpenVox A2410P/AE2410P 3FXS+3FXO
- 一、 把 A2410P/AE2410P 的卡插入 PCI 插槽,接好电源。
- 二、 启动 Elastix 1.6,进入系统,在命令行输入命令:

Ispci -vvv

检查输出结果,查看系统是否识别 A2410P/AE2410P,如下图红线标识表示识别:

01:01.0 Communication controller: Unknown device 1b74:2410 (rev 01) Subsystem: Unknown device 1b74:0001 Control: I/O+ Mem+ BusMaster+ SpecCycle- MemWINV+ VGASnoop- ParErr- Steppin g- SERR- FastB2B-Status: Cap- 66MHz- UDF- FastB2B- ParErr- DEVSEL=slow >TAbort- <TAbort- <MAb ort- >SERR- <PERR-Latency: 64, Cache Line Size: 16 bytes Interrupt: pin A routed to IRQ 50 Region 0: Memory at dcd00000 (32-bit, non-prefetchable) [size=1M]

三、 下载驱动程序。请注意:下载的 Dahdi 版本一定要与 elastix 系统里 Dahdi 版本一 致。

- (1) 查看 Dahdi 驱动版本:
 # modinfo /lib/modules/'unme -r'/dahdi/dahdi.ko
 此处看到的 Dahdi 版本为: 2.2.0.2,
 则需下载 dahdi-linux-complete-2.2.0.2+2.2.0
- (2) 下载 Dahdi 驱动程序和 A2410P/AE2410P 驱动程序,将 A2410P/AE2410P 驱动程序下载至 dahdi-linux-complete-2.2.0.2+2.2.0/linux/drivers/dahdi/目录下: # cd /usr/src
 # wget <u>http://downloads.asterisk.org/pub/telephony/dahdi-linux-complete/rel</u> <u>eases/dahdi-linux-complete-2.2.0.2+2.2.0.tar.gz</u>
 # tar -zxvf dahdi-linux-complete-2.2.0.2+2.2.0
 # cd /usr/src/dahdi-linux-complete-2.2.0.2+2.2.0/linux/drivers/dahdi/
 # wget <u>http://downloads.openvox.cn/pub/drivers/dahdi-patches/a2410p/opvx</u> <u>a24xx_dahdi-linux.tar.gz</u>

tar -zxvf opvxa24xx_dahdi-linux.tar.gz

(3) 如果是 AE2410P,则还需下载并安装 firmware:
cd /usr/src
wget <u>http://downloads.openvox.cn/pub/firmwares/opvx-dahdi-fw-oct6114-0</u> 32-1.07.01.tar.gz

7

OpenVox

A2410P/AE2410 安装配置说明

安装 firmware:

tar -zxvf opvx-dahdi-fw-oct6114-032-1.07.01.tar.gz # cp dahdi-fw-oct6114-032.bin /lib/firmware/ # mkdir /usr/lib/hotplug/firmware/ # mv dahdi-fw-oct6114-032.bin /usr/lib/hotplug/firmware/

- 四、 修改配置文件
- (1) 修改/usr/src/dahdi-xx/linux/build_tools/live_dahdi
 #vi /usr/src/dahdi-xx/linux/build_tools/live_dahdi
 添加以下所示红色标识的字符:

MODULES_LOAD="\$MODULES_LOAD xpp/xpp_usb"

wctdm24xxp | wct4xxp | wcte12xp | wctc4xp | opvxa24xx) MODULES_LOAD="\$MODULES_LOAD \$mod/\$mod"

(2) 修改/usr/src/dahdi-xx/linux/drivers/dahdi/Kbuild
 #vi /usr/src/dahdi-xx/linux/drivers/dahdi/Kbuild
 添加以下所示红色标识的一行:

obj-\$(DAHDI_BUILD_ALL)\$(CONFIG_DAHDI_WCT4XXP) obj-\$(DAHDI_BUILD_ALL)\$(CONFIG_DAHDI_WCT4XXP) obj-\$(DAHDI_BUILD_ALL)\$(CONFIG_DAHDI_WCTC4XXP) += wct4xxp/ += opvxa24xx/ += wctc4xxp/

8

(3) 修改/usr/src/dahdi-xx/linux/drivers/dahdi/Kconfig
 # vi /usr/src/dahdi-xx/linux/drivers/dahdi/Kconfig
 添加以下所示红色标识的语句:

config DAHDI_WCT4XXP tristate "Digium Wildcard dual- and quad-T1/E1/J1 Support" depends on DAHDI && PCI default DAHDI --help---This driver provides support for the following Digium Wildcard products: * TE205/206/207/210/211/212P (PCI/PCI-X) * TE220 (PCI-E) * TE405/406/407/410/411/412P (PCI/PCI-X) * TE420 (PCI-E) To compile this driver as a module, choose M here: the module will be called wct4xxp. If unsure, say Y. config DAHDI_OPVXA24XX tristate "OpenVox 24 ports analog card Support" depends on DAHDI && PCI default DAHDI ---help-This driver provides support for the following OpenVox



9

* A2410P (PCI)

To compile this driver as a module, choose M here: the module will be called opvxa24xx.

If unsure, say Y.

(4) 修改/usr/src/dahdi-xx/tools/xpp/perl_modules/Dahdi/Hardware/PCI.pm # vi /usr/src/dahdi-xx/tools/xpp/perl_modules/Dahdi/Hardware/PCI.pm

添加以下所示红色标识语句:

from opvxa24xx
'1b74:2410' => { DRIVER => 'opvxa24xx', DESCRIPTION => 'OpenVox A2410P' },
from wctdm24xxp
'd161:2400' => { DRIVER => 'wctdm24xxp', DESCRIPTION => 'Wildcard TDM2400P' },
'd161:0800' => { DRIVER => 'wctdm24xxp', DESCRIPTION => 'Wildcard TDM800P' },

(5) 修改/usr/src/dahdi-xx/tools/xpp/perl_modules/Dahdi/Chans.pm

#vi /usr/src/dahdi-xx/tools/xpp/perl_modules/Dahdi/Chans.pm 添加以下所示红色标识语句:

```
my $dahdi_cfg = $ENV{DAHDI_CFG} || '/usr/sbin/dahdi_cfg';
sub probe_type($) {
    my $self = shift;
    my $fqn = $self->fqn;
    my $num = $self->num;
    my $type;
    if($fqn =~ m:WCTDM/|WRTDM/|OPVXA1200/|OPVXA24XX/:) {
        my %maybe;
        undef %maybe;
        foreach my $sig (qw(fxo fxs)) {
            my $cmd = "echo ${sig}ks=$num | $dahdi_cfg -c /dev/fd/0";
            $maybe{$sig} = system("$cmd >/dev/null 2>&1") == 0;
    }
}
```

(6) 修改/usr/src/dahdi-xx/tools/modules.sample

#vi /usr/src/dahdi-xx/tools/modules.sample 添加以下所示红色标识语句:

```
# Digium TE205P/TE207P/TE210P/TE212P: PCI dual-port T1/E1/J1
# Digium TE405P/TE407P/TE410P/TE412P: PCI quad-port T1/E1/J1
# Digium TE220: PCI-Express dual-port T1/E1/J1
# Digium TE420: PCI-Express quad-port T1/E1/J1
wct4xxp
# OpenVox A2410P: up to 24 analog ports
opvxa24xx
```



(7) 修改/usr/src/dahdi-xx/tools/blacklist.sample

vi /usr/src/dahdi-xx/tools/blacklist.sample 添加以下所示红色标识语句:

blacklist wctdm blacklist opvxa24xx blacklist wctc4xxp blacklist wcb4xxp

五、 编译安装

开始编译 Dahdi, 输入: # cd /usr/src/ dahdi-linux-complete-2.2.0.2+2.2.0 # ./configure # make # make install # make config

六、 加载驱动

输入命令# asterisk -r, 在 CLI 输入 stop now , 停止 asterisk。
service dahdi stop
modprobe dahdi
modprobe opvxa24xx opermode=CHINA
输入命令: # dmesg
如果使用的是 AE2410P, 从下面的输出中可以找到 EC 模块。

```
OpenVox A2410P version: 1.0
Module 0: Installed -- AUTO FXO (CHINA mode)
Module 1: Installed -- AUTO FXO (CHINA mode)
Module 2: Installed -- AUTO FXO (CHINA mode)
Module 3: Installed -- AUTO FXO (CHINA mode)
Module 4: Installed -- AUTO FXS/DPO
Module 5: Installed -- AUTO FXS/DPO
Module 6: Installed -- AUTO FXS/DPO
Module 7: Installed -- AUTO FXS/DPO
Module 8: Installed -- AUTO FXO (CHINA mode)
Module 9: Installed -- AUTO FXO (CHINA mode)
Module 10: Installed -- AUTO FXO (CHINA mode)
Module 11: Installed -- AUTO FXO (CHINA mode)
Module 12: Installed -- AUTO FXS/DPO
Module 13: Installed -- AUTO FXS/DPO
Module 14: Installed -- AUTO FXS/DPO
Module 15: Installed -- AUTO FXS/DPO
Module 16: Installed -- AUTO FXO (CHINA mode)
Module 17: Installed -- AUTO FXO (CHINA mode)
Module 18: Installed -- AUTO FXO (CHINA mode)
Module 19: Installed -- AUTO FXO (CHINA mode)
Module 20: Installed -- AUTO FXS/DPO
Module 21: Installed -- AUTO FXS/DPO
Module 22: Installed -- AUTO FXS/DPO
Module 23: Installed -- AUTO FXS/DPO
VPM450: echo cancellation supports 32 channels
VPM450: echo cancellation for 32 channels
VPM450: hardware DTMF disabled.
VPM450: Present and operational servicing 1 span(s)
```



11

修改配置文件/etc/dahdi/genconf_parameter:

如果是 A2410P,则 echo_can mg2;如果是 AE2410P,则 echo_can none。

然后再运行下面的命令:

dahdi_genconf

运行这个命令后,如果上面有报 error,请认真查看报错的具体信息,系统会自动给出解决问题的命令,用户可以根据该命令进行解决,然后再次运行,如无报错,则可进行下一步。此命令会自动生成/etc/dahdi/system.conf和/etc/asterisk/dahdi-channels.conf两个文件。

chan_dahdi.conf, dahdi-channels.conf, extensions.conf 三者关系图:





12

system.conf 文件如下: (system.conf 文件是 A2410P/AE2410P 的基本通道配置文件)

Autogenerated by /usr/sbin/dahdi_genconf on Thu Jul 22 00:56:58 2010 # If you edit this file and execute /usr/sbin/dahdi_genconf again, # your manual changes will be LOST. # Dahdi Configuration File # # This file is parsed by the Dahdi Configurator, dahdi_cfg # # Span 1: OPVXA24XX/24 "OpenVox A2410 Board 25" (MASTER) fxsks=1 fxsks=2 fxsks=3 fxsks=4 fxoks=5 fxoks=6 fxoks=7 fxoks=8 ▶ 其他内容省略 # Global data loadzone = us defaultzone = us

dahdi-channels.conf 文件如下:

; Autogenerated by /usr/sbin/dahdi_genconf on Thu Jul 22 00:56:58 2010 ; If you edit this file and execute /usr/sbin/dahdi_genconf again, ; your manual changes will be LOST. ; Dahdi Channels Configurations (chan_dahdi.conf)						
; ; This is not intended to be a complete chan_dahdi.conf. Rather, it is intended ; to be #include-d by /etc/chan_dahdi.conf that will include the global settings						
; Span 1: OPVXA24XX/24 "OpenV ;;; line="1 OPVXA24XX/24/0" signalling=fxs_ks callerid=asreceived group=0	ox A2410 Board 25" (MASTER)					
context=from-pstn	//定义拨号规则的					
channel => 1 callerid= group= context=default	//通道 1					
;;; line="2 OPVXA24XX/24/1" signalling=fxs_ks callerid=asreceived group=0						
context=from-pstn	//定义拨号规则的					
channel => 2 callerid= group= context=default	//通道2					



;;; line="5 OPVXA24XX/24/4" signalling=fxo_ks callerid="Channel 5" <4005> mailbox=4005 group=5 context=from-internal	//定义拨号规则的 context,必须要 //与/etc/asterisk/extensions.conf 的 context 相对应
channel => 5 callerid= mailbox= group= context=default	//通道 5
;;; line="6 OPVXA24XX/24/5" signalling=fxo_ks callerid="Channel 6" <4006> mailbox=4006 group=5 context=from-internal	//定义拨号规则的 context,必须要 //与/etc/asterisk/extensions.conf 的 context 相对应
channel => 6 callerid= mailbox= group= context=default	//通道 6

检查自动生成的配置是否和自己 A2410P/AE2410P 一致,如果不一致则需要修改,注 意 FXS 口使用 FXO 信令,FXO 口用 FXS 信令。

改为中国制式(国内用户如果不改的话可能会有问题):

修改 system.conf 的以下两项: loadzone = cn defaultzone = cn

修改 asterisk/indications.conf: country=cn

运行命令: # dahdi_cfg -vvvv 执行到这里安装就算完成了。

七、 启动 Asterisk,运行下面命令:

asterisk -vvvvgc(如果 asterisk 已启动,可输入 *asterisk* -r)。进入 CLI 后输入 *dahdi show channels*,如果能看到模块,表示安装已经基本完成:

*CLI> dahdi show channels								
Chan Extension	Context	Language	MOH Interpret	Blocked State				
Pseudeo	default		default	In service				
1	from-pstn		default	In service				
2	from-pstn		default	In service				
3	from-pstn		default	In service				
4	from-pstn		default	In service				
5	from-intern	al	default	In service				
6	from-intern	al	default	In service				



14

7	from-internal	default	In service
8	from-internal	default	In service
9	from-pstn	default	In service
10	from-pstn	default	In service
11	from-pstn	default	In service
12	from-pstn	default	In service
13	from-internal	default	In service
14	from-internal	default	In service
15	from-internal	default	In service
16	from-internal	default	In service
17	from-pstn	default	In service
18	from-pstn	default	In service
19	from-pstn	default	In service
20	from-pstn	default	In service
21	from-internal	default	In service
22	from-internal	default	In service
23	from-internal	default	In service
24	from-internal	default	In service

下面是其中一个通道的状态。如果是 AE2410P,则可以看到 EC 状态为 ON,否则为 OFF。

*CLI> dahdi show channel 3 Channel: 3 File Descriptor: 17 Span: 1 Extension: Dialing: no Context: from-pstn Caller ID: Calling TON: 0 Caller ID name: Destroy: 0 InAlarm: 0 Signalling Type: FXS Kewlstart Radio: 0 Owner: DAHDI/3-1 Real: DAHDI/3-1 Callwait: <None> Threeway: <None> Confno: -1 Propagated Conference: -1 Real in conference: 0 DSP: yes Relax DTMF: no Dialing/CallwaitCAS: 0/0 Default law: ulaw Fax Handled: no Pulse phone: no Echo Cancellation: 128 taps, currently ON

开源通信 | <u>www.openvox.cn</u>



Master Channel: 6 Actual Confinfo: Num/6, Mode/0x0009 Actual Confmute: No Hookstate (FXS only): Offhook



第四章 Elastix 页面配置

1. 登录 Elastix 管理页面

打开浏览器输入你的 PBX 的 IP 地址, 然后输入你的用户名: admin, 密码: palosant o; 然后点击 Submit 按钮:

» Welcome to Elastix						
Please enter your username and password						
Username: admin Password: Submit						

2. 添加 extension,实现内部分机互打。

增加两个分机,然后再将两部电话接入到 FXS 模块接口,然后两部电话能互相呼叫。 (1)点击下面如图所示的 PBX 按钮:

6 elastix		_								
~	System	РВХ	Fax	Email	IM	Reports	Extras	Agenda		
PBX Configuration Flash Operat	or Panel	Voicema	ils M	lonitoring	End	point Config	uration	Conference	Extensions Batch	Tools

(2) 点击选择下图所示的 Extensions 选项:

Option	Add an Extension			
Unembedded freePBX				
Basic	Please select your Device below then click Submit			
Extensions	Device			
Feature Codes				
General Settings	Device Generic SIP Device			
Outbound Routes	Submit			
Trunks				

(3) 从下拉列表选项中,选择 Generic Zap Device,因为我们要设立 zap 分机,然后 点击 Submit 按钮,如图所示:



Option Unembedded freePBX	Add an Extension		
Basic Extensions	Please select your Device below then click Submit Device		
Feature Codes			
General Settings	Device	Generic SIP Device	
Outbound Routes	Submit	Generic SIP Device	
Trunks		Generic IAX2 Device Generic ZAP Device	
Inbound Call Control		Other (Custom) Device	

(4) 设置用户分机: 111 (用来接收的分机号码); Display Name: 111, 如下图所示:

Add Extension	
User Extension	111
Display Name	111
CID Num Alias	
SIP Alias	

(5)为你的分机指定一个通道号,如图所示:

Device Options	
This device uses zap tec	hnology. (Via DAHDI compatibility mode)
channel	5

(6) 点击 Submit 按钮提交:

Press 0:	🗹 Go To Operator
Press 1:]
Press 2:]
Submit	

(7) 点击屏幕上方的 "Apply Configuration Changes Here" 栏,如图所示:
 Apply Configuration Changes Here

17



- (8) 如果你使用的是 AE2410P, 则需要做以下设置, 否则可以直接跳至第(9)步。
- a. 点击右上角的"111<111>"按钮,如下图所示:

Extensions Batch Tools	Ø Ø
	Add Extension
	111 <111>

b.将 echocancelwhenbridged 设置为 yes,如下图所示:

echocancolwhenbridged	NOS	-
echocanceiwhenbhugeu	yes	

c.点击 Submit 按钮:

Press 0:	🕖 Go To Operator
Press 1:	
Press 2:	
Submit	

|--|

Apply Configuration Changes Here

(9) 按照以上步骤另外添加一个分机: 222, 添加完后就可以实现 111 与 222 互打了。

3. 添加呼入路由

添加一个呼入路由,能够帮助你接收呼入电话。

(1) 点击"Inbound Routes"栏:



Inbound Call Control
Inbound Routes
Announcements
Follow Me
IVR
Misc Destinations
Queues
Ring Groups
Time Conditions

(2) 在描述栏里输入 incoming1, 如图所示:

Add Incoming R	oute
Add Incoming Route	
Description: DID Number: Caller ID Number:	incoming1
Options	

(3) 点击 Extensions 栏,在下拉列表里选择一个应答来电的分机,然后点击提交。 如下图所示:

Set Destination	
 Terminate Call: Hangup Extensions: <111>111 D/D: 	*
IVR: Unname <222> 222 Phonebook Directory: Phonebook Directory Submit Clear Destination & Submit	

(4) 点击屏幕上方的 "Apply Configuration Changes Here" 栏。

Apply Configuration Changes Here



4. 设置中继

拨打外线需要设立中继。

(1) 点击 Trunks 栏,如下图所示:

Option	Add a Trunk	
Unembedded freePBX		
Basic	Add Zap Trunk (DAHDI compatibility mode)	
Extensions	Add IAX2 Trunk	
Feature Codes		
General Settings	Add SIP Trunk	
Outbound Routes	Add ENUM Trupk	
Trunks	Add ENOM Hunk	
Inbound Call Control	Add DUNDi Trunk	
Inbound Routes	Add Custom Truck	
Announcements	Add Custom Trunk	
Follow Me		

(2) 点击页面右上方的 Trunk ZAP/g0 按钮,如下图所示:

Extensions Batch	Tools	0 0
		Add Trunk
		Trunk ZAP/g0

(3) 在 Outbound Caller ID 文本框内输入 trunk1,如下图所示:

General Settings		
Outbound Caller ID:	trunk1	
Never Override CallerID:		
Maximum Channels:		
Disable Trunk:	Disable	
Monitor Trunk Failures:		Enable



(4) 点击下图所示的 Submit Changes 按钮:

Outgoing Settings

Zap Identifier (trunk name): g0

Submit Changes

(5) 点击屏幕上方的 "Apply Configuration Changes Here" 栏。

Apply Configuration Changes Here

5. 添加呼出路由

通过呼出路由,你能呼叫外线。

(1) 点击 Outbound Routes 按钮,如下图所示:

Option	Add Route	
Unembedded freePBX		
Basic	Route Name:	
Extensions	Route Password:	
Feature Codes	PIN Set:	None 💙
General Settings	Emergency Dialing:	
Outbound Routes	Intra Company Route:	
Trunks	Music On Hold?	default 💟

(2) 点击 "09_outside button",在下图中,保持默认设置,如下图所示: 然后点击 Submit Changes 按钮。

21



22

Luit Noute		Add Route
Delete Route 9_ou	tside	0 9_outside
Route Name:	9_outside Rename	
Route Password: PIN Set:	None 😽	
Emergency Dialing:	Π	
Intra Company Route		
Music On Hold?	default 💙	
Dial Patterns		
	91.	
	Clean & Remove duplicates	
Dial patterns wizards	(pick one)	
Trunk Sequence		
0	ZAP/g0 🔽 🛅	
	Add	

在这里 Dial Patterns 用了默认的 9|.,所以我们拨打外线时要加前缀 9。例如:如果 你要呼叫 123456,那么你要拨号 9123456.

(3) 点击屏幕上方的 "Apply Configuration Changes Here" 栏。

Apply Configuration Changes Here



OpenVox

第五章 技术支持

如果您在使用 OpenVox 产品时遇到有关产品技术问题,请先查看我们论坛上面相关的 产品栏目及通过以下方式联系我们:

1、论坛反馈问题

您可以把您所遇到的技术问题发布到我们的论坛上,我们将会在最短的时间内解决您所 提出来的问题。

点击进入论坛。

2、电子邮件联系

您还可以通过电子邮件发送您所遇到的产品技术问题到以下邮箱地址,我们也将在最短的时间内解决您所提出来的问题。

support@openvox.com.cn

第六章 参 考

www.openvox.cn

www.digium.com

www.asterisk.org

www.voip-info.org

www.asteriskguru.com